





# COOKTOP PARTS

For Models: RS310PXGW0, RS310PXGN0  
(White) (Almond)

30" Set-In Electric Range  
Coil Burners

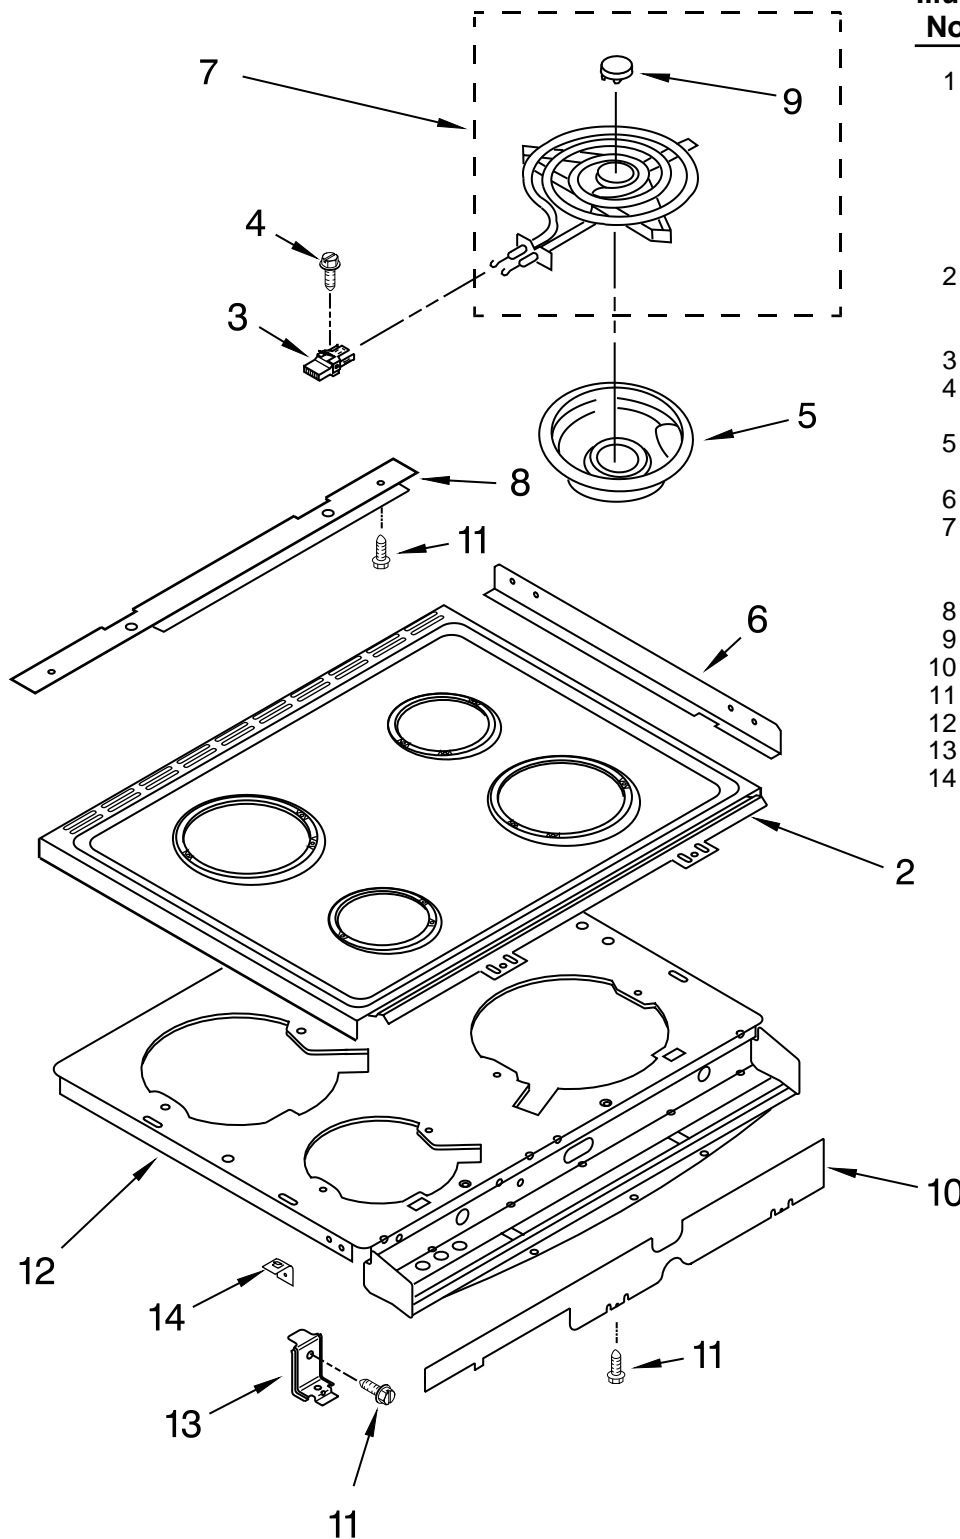


Illus. No.	Part No.	DESCRIPTION
1	LIT9753313	Literature Parts Use & Care Guide
	LIT9752913	Installation Instructions
	LIT9753426	Anti-Tip Template
	LIT3191638	Safer Cooking Tips
	LIT9753452	Wiring Diagram
2		Cooktop, Coil
	9781892GW	White
	9752882GT	Almond
3	9781324	Receptacle, Element
4	9750891	Screw, 6-32 x 1/4
5	3150246	Ring-Bowl 6"
	3150247	Ring-Bowl 8"
6	9752890	Trim, Side
7		Element, Surface
	3191026	Coil, 6" LF-RR
	3191025	Coil, 6" LR-RF
8	9752889	Trim, Rear
9	4211952	Medallion
10	9752884	Shield, Cover
11	9780265	Screw
12	9752883	Support, Cooktop
13	9751629	Bracket, Pivot
14	9782000	Bracket, Rear

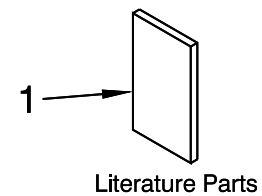

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# CONTROL PANEL PARTS

For Models: RS310PXGW0, RS310PXGN0  
(White) (Almond)

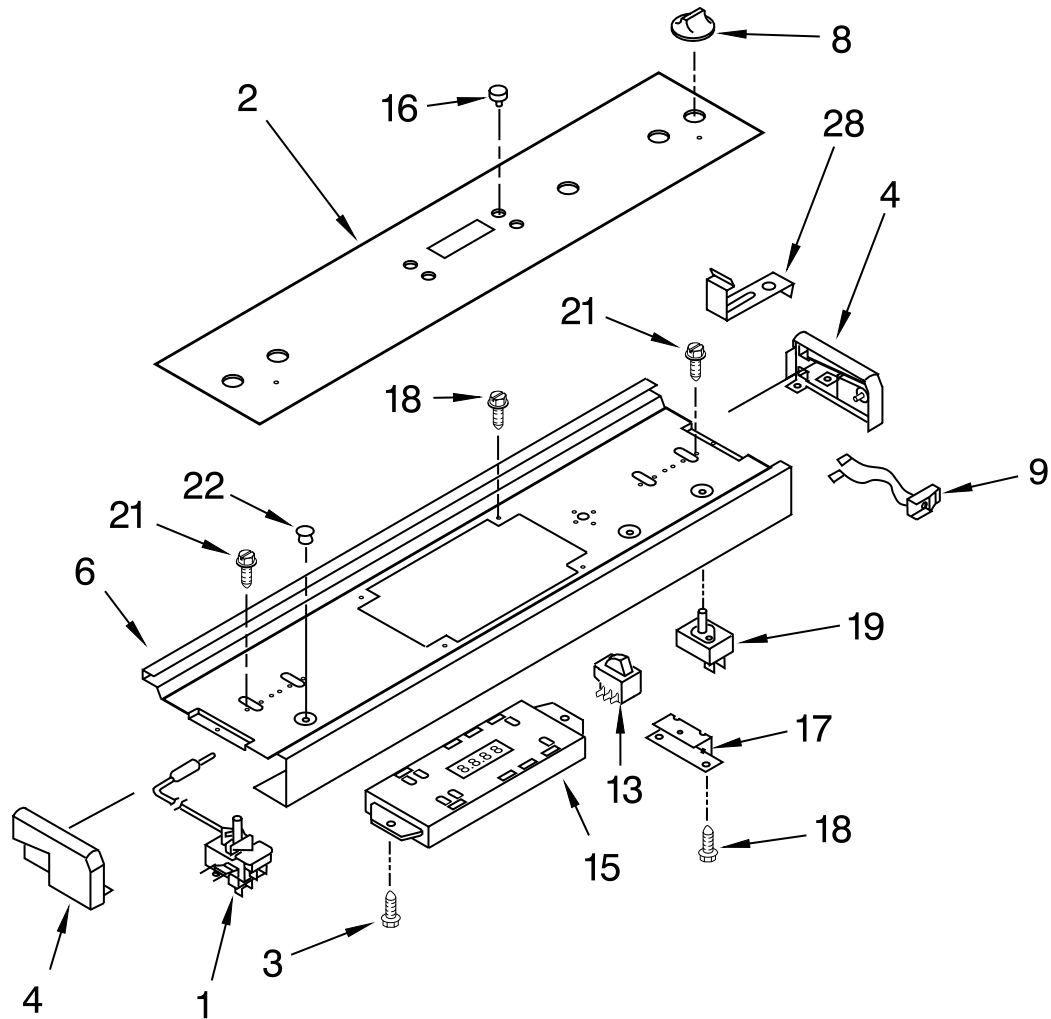


Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	9752911	Thermostat	8	9752405FB	Knobs, Control (5)	19		Infinite Switch
2	9752900CB	Console-Glass (Control Panel)	9	9780798	Light, Indicator		9750643	1400W (2)
3	9780265	Screw, 10 x 3/8	13	9780683	Switch, Oven Light		9750646	2400W (2)
4		End Cap	15	9781714	Oven Control (Timer Assembly)	20	3400816	Screw, (8)
	9781889FB	Left	16	9781954FB	Button, Timer (4)	21	3400853	Screw
	9781888FB	Right	17	9753304	Bracket, Timer (2)	22	9780799	Lens, Red
6		Panel, Control	18	9780265	Screw, (4)	28	9752906	Clip, (2)
	9752898PB	Black						

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# DOOR AND DRAWER PARTS

For Models: RS310PXGW0, RS310PXGN0  
(White) (Almond)

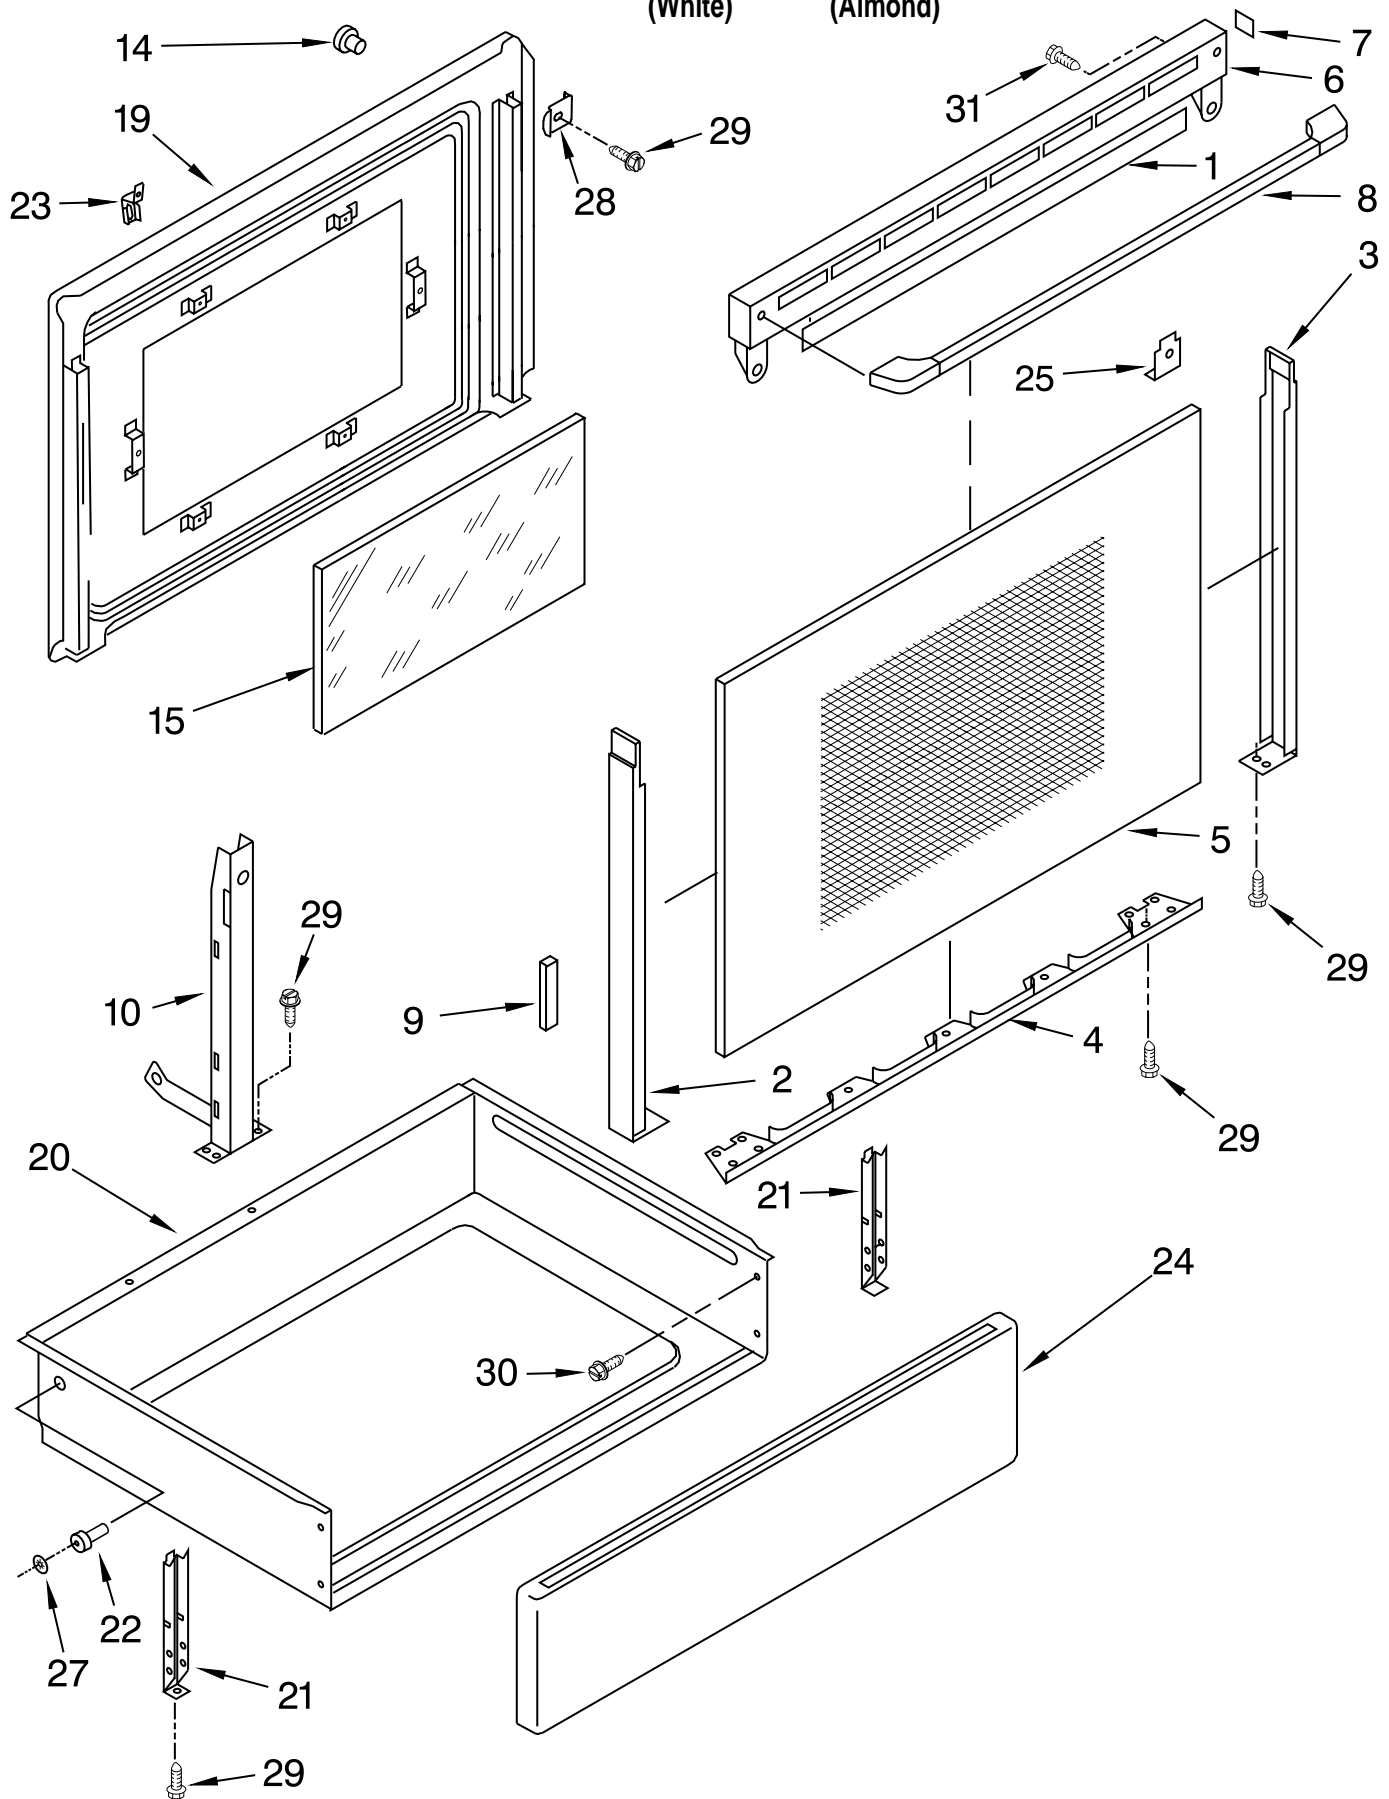

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# DOOR AND DRAWER PARTS


For Models: RS310PXGW0, RS310PXGN0  
(White) (Almond)

Illus. No.	Part No.	DESCRIPTION
1	9781659	Gasket,DoorVent
2	9782003PB	Trim, Door-Left
3	9782004PB	Trim, Door-Right
4	9781209PB	Trim, Door Bottom
5	9781718PB	Glass, Door Front
6	9753498GB	Vent, Door
7	9781490	Seal, Door
8	9752701PB	Handle, Door
9	9781449	Gasket, Door Glass
10	9782032	Hinge, Door R or L
14	9780771	Bumper, Door
15	9781651	Glass, Pyro
19	9781599GM	Liner, Door
20	9780583	Drawer & Roller
21	9750169	Bracket, Drawer
22	422604	Roller, Drawer
23	9750676	Retainer, Door
24		Front, Drawer
	9782108PW	White
	9782108PT	Almond
25	9781613	Retainer, Glass
27	90296	Clip
28	9781502	Spacer, Door
29	9780265	Screw
30	9780272	Screw
31	9781072	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# OVEN CHASSIS PARTS

For Models: RS310PXGW0, RS310PXGN0  
(White) (Almond)

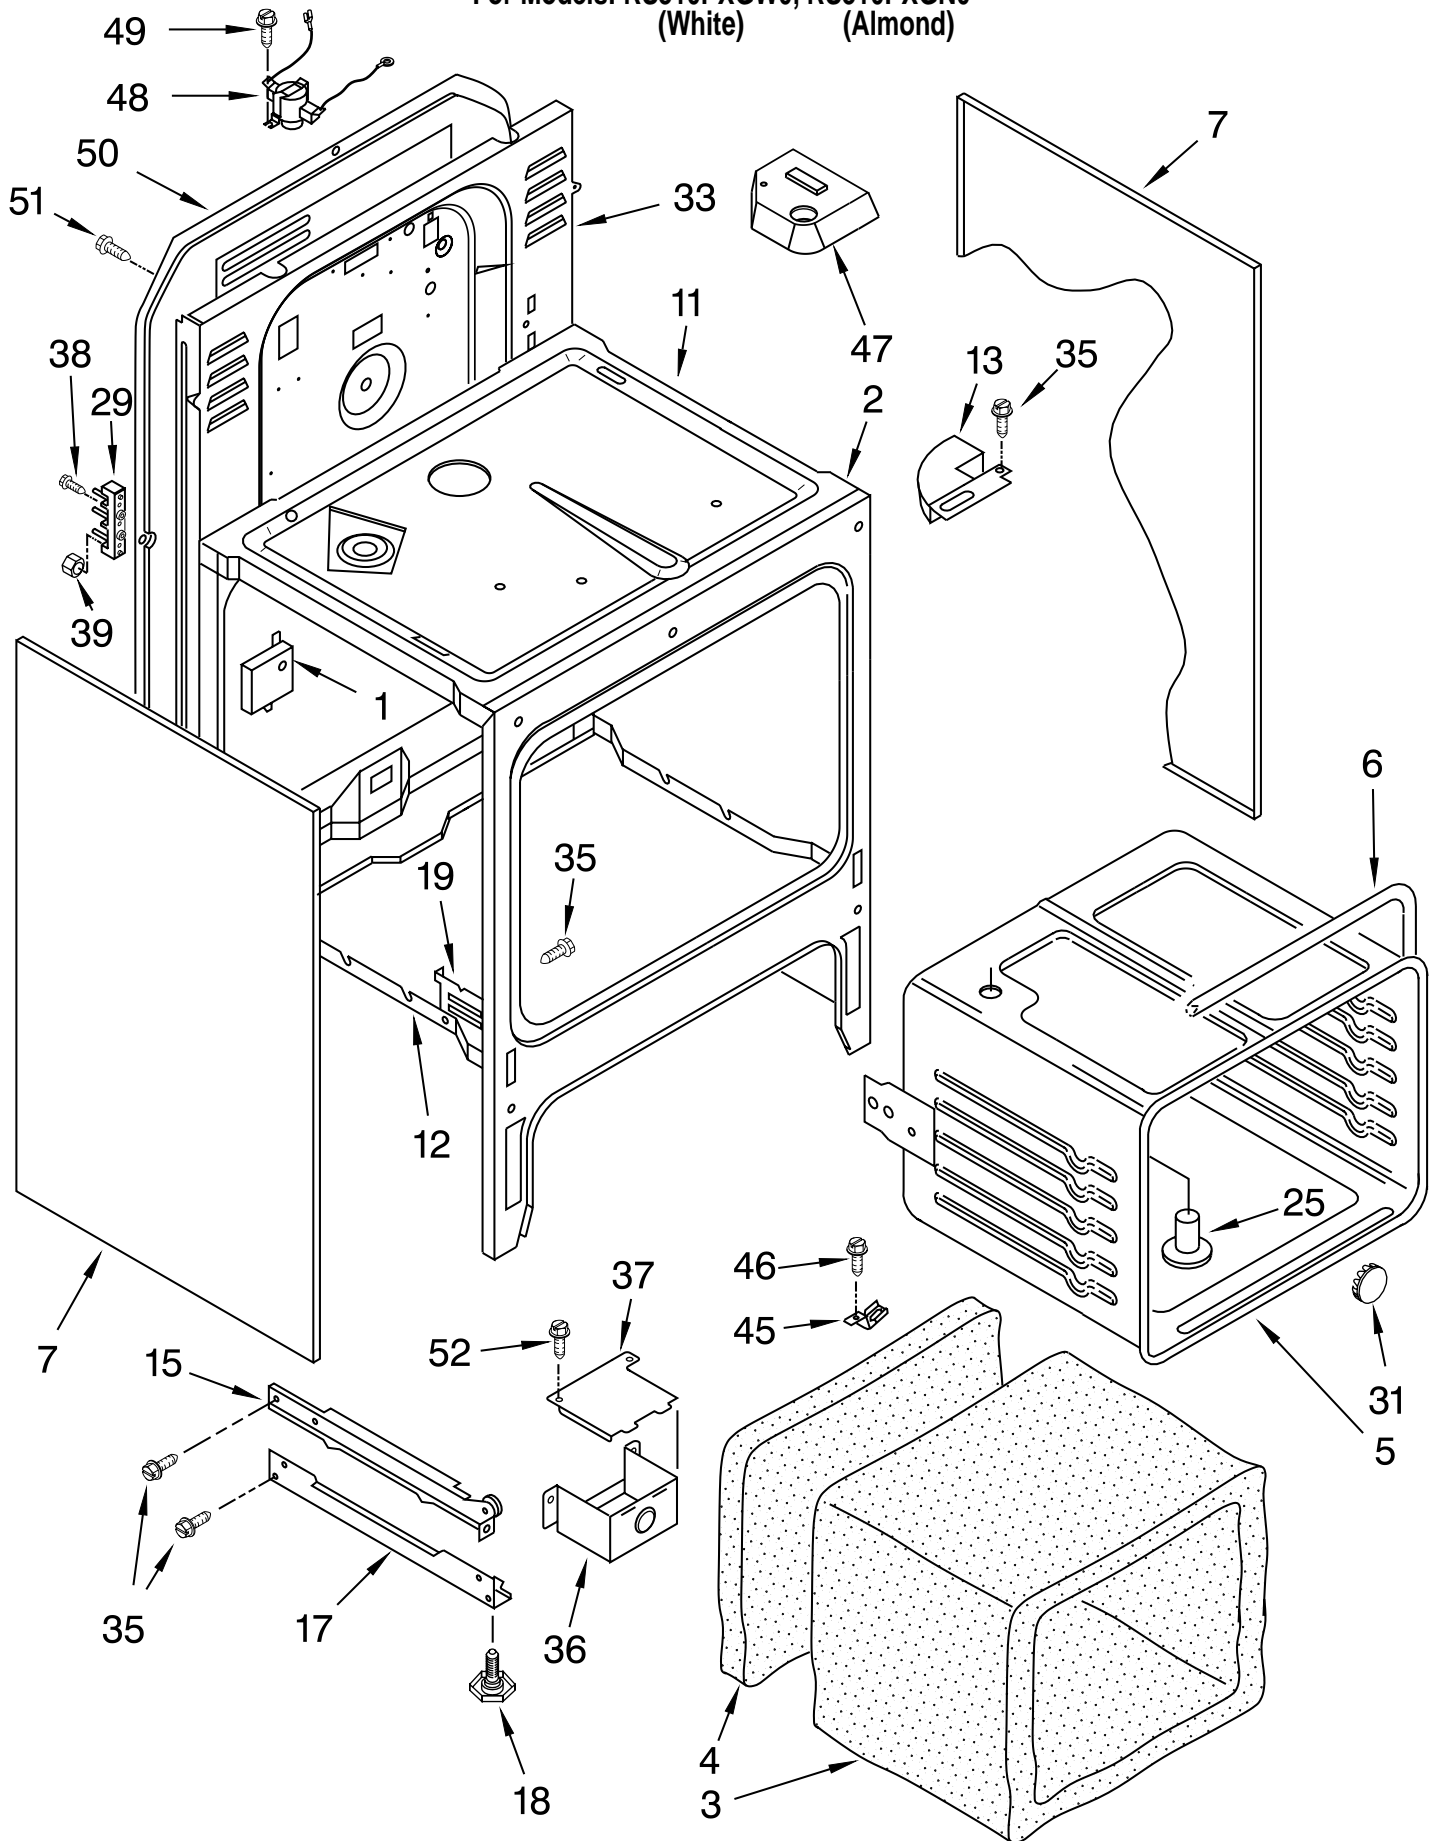

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST


# OVEN CHASSIS PARTS

For Models: RS310PXGW0, RS310PXGN0  
(White) (Almond)

Illus. No.	Part No.	DESCRIPTION
1	9752868	Vent Box, Oven
2	9750477GM	Chassis, Front
3	9754001	Insulation, Wrap
4	9754010	Insulation, Rear
5	9781294GM	Oven Liner
6	9750691	Gasket, Oven
7		Oven , Side Panel
	9781907PW	White, L or R
	9781907PT	Almond, L or R
11	9752919	Burner Box
12	9750142	Oven Bottom
13	9751653	Duct, Top
15	9750223	Drawer Rail, Left
	9750224	Drawer Rail, Right
17	9750147	Bottom Rail (2)
18	312701	Foot, (4)
19	9782005	Receiver, Hinge (R or L)
25	9750391	Vent Tube
29	258076	Block, Terminal
31	9780578	Plug, Button
33	9751051	Back, Chassis
35	9780265	Screw
36	9752344	Box, Terminal
37	9752345	Cover, Term. Box
38	98884	Screw
39	112432	Nut
45	3169573	Strap, Ground
	313660	Clip
46	690989	Screw, Ground
47	9782330	Block, Balance
48	3189942	Thermostat, Safety
49	9780271	Screw
50	9751353	Cover, back
51	423247	Screw
52	9780272	Screw

# OVEN PARTS

For Models: RS310PXGW0, RS310PXGN0  
(White) (Almond)

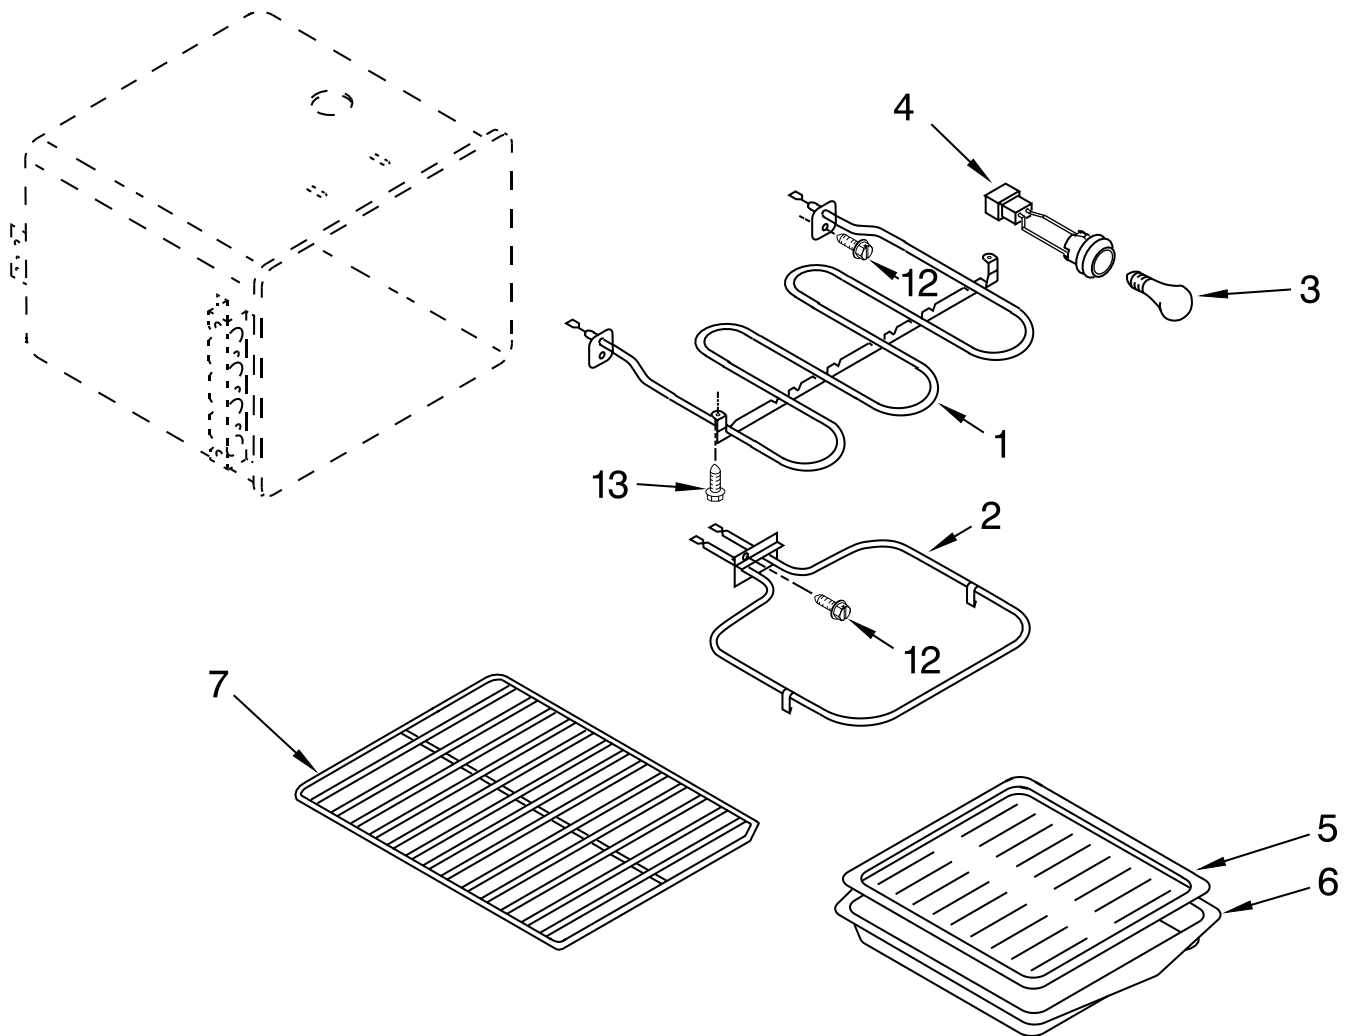

Illus. No.	Part No.	DESCRIPTION
1	9780993	Element, Broil
2	9750213	Element, Bake
3	8935	Bulb, Oven
	313382	Clip, Bulb
4	9750962	Light Socket
5	420104GM	Grill, Broiler
6	420101GM	Pan, Broiler
7	9750498	Rack, Standard (2)
12	9781509	Screw
13	340184	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# MISCELLANEOUS PARTS

For Models: RS310PXGW0, RS310PXGN0  
(White) (Almond)

Illus. No.	Part No.	DESCRIPTION
<b><u>SPLICING WIRES--25FT. LENGTH</u></b>		
242828	Wire, Black	12 Ga. 150°c
242820	Wire, Black	14 Ga. 150°c
242821	Wire, Blue	14 Ga. 150°c
242822	Wire, Brown	14 Ga. 150°c
242830	Wire, Brown	14 Ga. 200°c
242823	Wire, Green	14 Ga. 150°c
242824	Wire, Orange	14 Ga. 150°c
242829	Wire, Red	12 Ga. 150°c
242825	Wire, Red	14 Ga. 150°c
242831	Wire, Red	14 Ga. 200°c
242826	Wire, White	14 Ga. 150°c
242827	Wire, Yellow	14 Ga. 150°c
242832	Wire, Yellow	14 Ga. 200°c
<b><u>PAINT, TOUCH-UP (1/2oz.)</u></b>		
	72017	White
	72107	Almond
	*72113	Platinum
	511873	White Porcelain (2 Oz.)

Illus. No.	Part No.	DESCRIPTION
<b><u>PAINT, PRESSURIZED SPRAY (12 oz.)</u></b>		
	350930	White
	350956	Almond
	285006	Superior Black
	206922	Primer (White)
<b><u>PAINT, BULK (1 qt.)</u></b>		
	799344	White (Uncut)
	978883	Almond (Uncut)
<b><u>REFINISHING MATERIAL</u></b>		
	799832	Kit, Porcelain Repair (White)
	242756	Touch-Up Self-Clean (1/2 Pt.)
	261582	Grease
	814009	Glass Cleaner
	9753543	Creme Cleaner
<b><u>INSULATION</u></b>		
	261514	Insulation, Fiberglass (1-1/2" x 24" x 120")
	240132	Insulation, Fiberglass (2-1/2" x 22" x 120")
	241430	Foil, Aluminum Oven (18" x 25')

Illus. No.	Part No.	DESCRIPTION
<b><u>WIRING HARNESS PARTS</u></b>		
	9752886	Harness, Wire (Cooktop Coil)
	9781843	Harness, Wire (Inf/Control)
	9752887	Harness, Wire (Main)
	9781875	Harness, Wire (Single Pilot)
	690989	Screw, Grounding
	9751868	Grommet, Harness
	20082084	Tie, Wire
	9782111	Wrap, Tie
	9753069	Harness, Wire (Rocker Switch)
	90016	Clip
	98997	Clip
<b><u>ANTI-TIP KIT</u></b>		
	9751745	Anit-Tip Kit
<b><u>Miscellaneous</u></b>		
		Trim, Back Cover
	9753267PW	White
	9753267PT	Almond